


**Suggested wiring
to prevent pump from running dry and/or to protect heater**

INT 026 11/2006

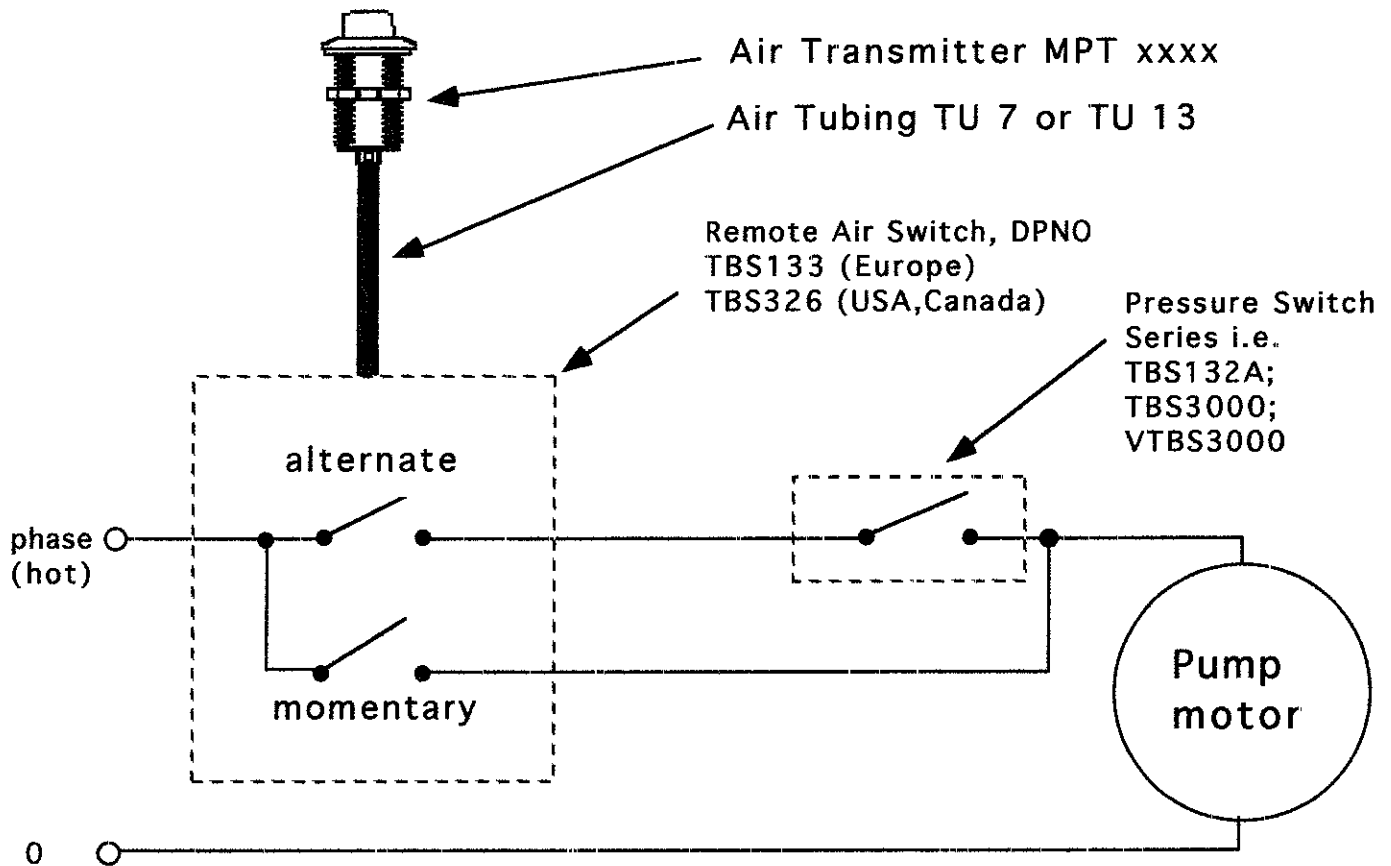

Note: Wiring must be in accordance with international, national, state, provincial, local and all other relevant electrical regulations. Tecmark not liable for actual wiring.

Function:

START: press and hold transmitter till pump builds up sufficient pressure to close the contact of the pressure switch
STOP: press and release air transmitter

MARCHE: appuyer le bouton poussoir jusqu'à ce que la pompe génère une pression suffisante pour fermer le contact du pressostat
ARRET: appuyer puis relâcher le bouton poussoir

START: Luftdruckgeber drücken bis die Pumpe ausreichend Druck liefert, um den Druckwächterkontakt zu schließen
STOP: Luftdruckgeber einmal kurz drücken und loslassen



Tecmark Corporation,
 7745 Metric Drive, Mentor, Ohio 44060 USA
 Tel. 001-440-205 7600 Fax 001-205-440 7601